

Cross Section of Molding

Kit consists of

- 1 ea Backwall section
- 1 ea Left front section
- 1 ea Left top section
- 1 ea Right front section
- 1 ea Right top section
- 10 ft. 5/16" Butyl tape 3M #8621
- 5/16" thick, 1/2" wide

Cross Section of Molding installed

Installation


Measure the distance between the drywall at the back wall. Trim or sand the molding sections to size with a hacksaw. Cut the Butyl tape in 2" pieces, fold double as needed and stick to the nailing flange and drywall at 8" intervals. Press the molding in place. Repeat with the rest of the sections. Caulk all around the edges.

Material

Matching gelcoat fiberglass
Install with butyl tape and caulk

Application

For use on remodel where the drywall is damaged past the point where the shower with our narrower (1-1/4") molding #FTK 5-125 would not cover it.

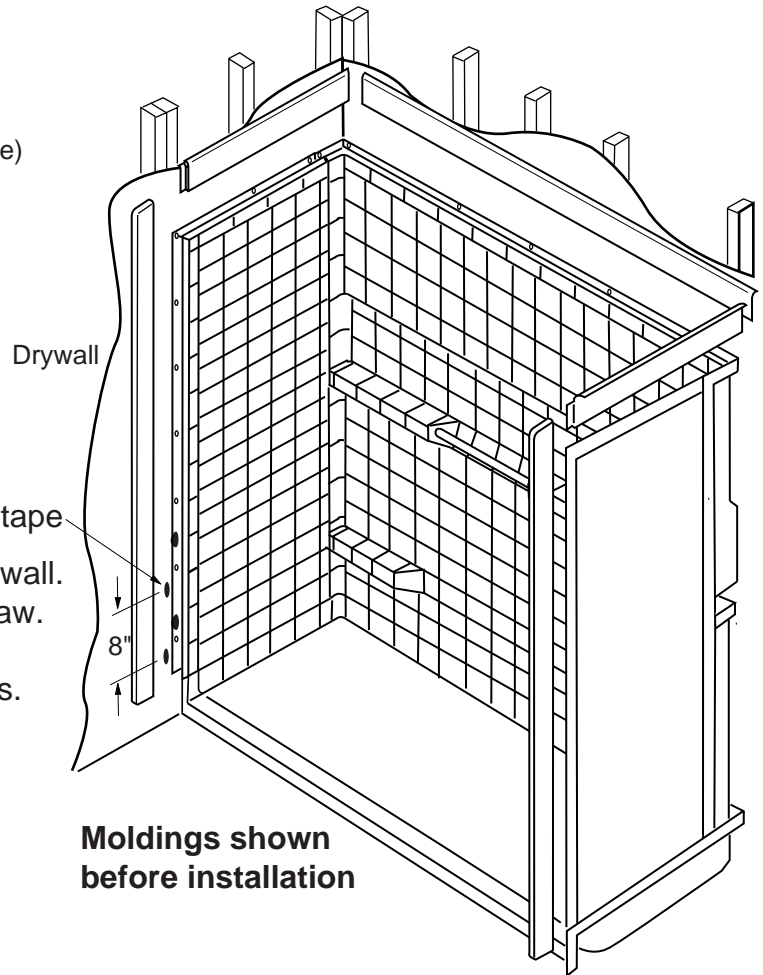

Moldings shown before installation



Flange Trim Kit #FTK-R-5-3

| | | |
|----------------------------------|------------------------|-------------|
| BEST BATH SYSTEMS | TITLE: Flange Trim Kit | SCALE : |
| Div. of Fiberglass Systems, Inc. | MODEL : all | SHT. 1 of 1 |